

# AAV6 Titration ELISA Manual

Enzyme-linked immunosorbent assay (ELISA) for the quantitative determination of AAV serotype 6 particles in cell culture supernatants and purified virus preparations.

Catalog No.:	PRAAV6
Contents:	12 x 8 Determinations
Storage conditions:	2-8°C
Version:	03

For research use only.



# **Table of Contents**

1. Introduction	2
2. Test Principle	3
3. Required Material	5
4. Test Kit Contents	6
5. Preparation of Reagents	7
6. Storage & Stability	9
7. Short Protocol	10
8. Kit Control and Specimen Dilution	12
9. Test Procedure	14
10. Calculation of Results	15
11. Test Validity	17
12. Test Characteristics	17
13. General Information	18

### 1. Introduction


Adeno-associated viruses (AAV) are non-pathogenic ssDNA viruses, which are the subject of in-depth studies as viral vectors for gene therapy. The virus transduces a variety of dividing and non-dividing cells showing long-term gene expression with low cellular immune response. AAV has been used in several clinical trials (e.g. FIX, CFTR, Parkinson's, Canavan disease) showing no serious adverse vector related effects.

Methods for characterizing AAV preparations currently include titration ELISA, qPCR, ddPCR, DNA dot blot, determination of transducing units, infectious center assay, SDS-PAGE and electron microscopy.

Immunotitration by PROGEN's AAV6 Titration ELISA offers a fast, sensitive and reproducible method for titration of intact AAV6 wild-type virions, AAV6 recombinant virions as well as assembled and intact empty AAV6 capsids.

# 2. Test Principle

The assay is based on the sandwich ELISA technique (see figure below). A monoclonal antibody specific for a conformational epitope on assembled AAV6 capsids is coated onto strips of a microtiter plate and is used to capture AAV6 particles from the specimen. Captured AAV particles are detected in two steps:

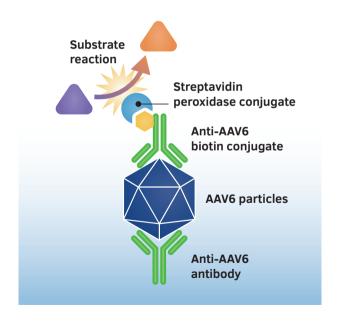

- **1.** A biotin-conjugated monoclonal AAV6 antibody is bound to the immune complex.
- A streptavidin peroxidase conjugate reacts with the biotin molecules.

Adding substrate solution results in a color reaction, which is proportional to the number of specifically bound viral particles. The absorbance is measured photometrically at 450 nm (optional: reference wavelength at 650 nm).

The provided Kit Control contains an AAV6 particle preparation of empty capsids. Two-fold serial dilutions of the material result in a typical titration curve. The curve allows the quantitative determination of samples of an unknown particle titer.

# 3. Required Material

Precision pipettes

Sterile pipette tips

Distilled water

Reaction tubes

Incubator at 37°C and, if necessary, incubator at room temperature (20 – 26°C)

ELISA Reader (450 nm, optional: reference wavelength at 650 nm)

# 4. Test Kit Contents

КС	Microtiter Plate, 12 x 8-well- strips, coated with mouse mono- clonal antibody to AAV6 in reseal- able aluminum bag with desiccant, 1 plate. Ready-to-use.  Kit Control AAV6 (standard), lyophilized, 3 vials. Reconstitute before use.
J	lyophilized, 3 vials. Reconstitute
	Assay Buffer 20x, 3 x 20 ml. Dilute before use.
	Anti-AAV6 Biotin Conjugate 20x, 1 vial, lyophilized. Reconstitute and dilute before use.
· ·	Streptavidin Peroxidase Conjugate 20x, 750 µl. Dilute before use.
	Substrate, TMB (tetramethylbenzi- dine), 12 ml. Ready-to-use.
	Stop Solution, 13 ml. Ready-to-use.
Adhesive foil	

# 5. Preparation of Reagents

Prior to use, allow kit to reach room temperature (RT, 20-26°C).



# Preparation and pre-dilution of components:

Dilute required reagent volumes immediately before use.

### ASSB 20x (Assay Buffer 20x)

The buffer concentrate may contain salt crystals, which dissolve quickly at 37°C (e.g. in a water-bath). Let buffer cool down to RT before use.

- 1. Dilute 1:20 with distilled water.
- The diluted component is named ASSB 1x (about 30 ml ASSB 1x per strip is needed).

### KC (Kit Control)

- 1. Reconstitute with 500 µl ASSB 1x.
- Incubate for 5 min at RT and then mix by rolling for another 5 min. Avoid vortexing.
- Find the amount of capsids/ml on the label or the lot-specific Quality Control Certificate.

### Biotin conc. (Anti-AAV6 Biotin Conjugate 20x)

- 1. Reconstitute with 750 µl ASSB 1x.
- Incubate for 5 min at RT and then mix by rolling for another 5 min. Avoid vortexing.
- 3. Immediately before use, dilute 1:20 with ASSB 1x.
- **4.** The diluted component is named **Biotin 1x**.

### **Strep-HRP 20x** (Streptavidin Peroxidase Conjugate 20x)

- 1. Immediately before use, dilute 1:20 with ASSB 1x.
- 2. The diluted component is named **Strep-HRP 1**x.
- 3. Store in the dark until use.

# 6. Storage & Stability

Store the test kit and components at  $2-8^{\circ}$ C. The unopened reagents are stable at  $2-8^{\circ}$ C until the indicated expiry date.


### Stability after opening:

4 weeks at 2-8°C: ASSB 20x, Strep-HRP 20x, TMB, STOP

4 weeks after reconstitution at 2-8°C: KC, Biotin conc.

4 weeks in the resealable aluminum bag with desiccant at 2-8°C: MTP

# 7. Short Protocol

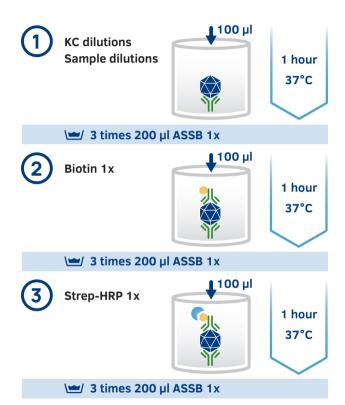





15 min RT

5 Stop



RT

Read at 450 nm (and 650 nm)



within 30 min

# 8. Kit Control and Specimen Dilution

We recommend diluting the reconstituted Kit Control (KC) in ASSB 1x in steps of 1:2:


$$1:2$$
  $1:2$   $1:2$   $1:2$   $1:2$   $1:2$   $1:2$   $1:2$  Undiluted →  $1:2$  →  $1:4$  →  $1:8$  →  $1:16$  →  $1:32$  →  $1:64$ 

An example for dilutions is provided in Table 1 on the lot-specific Example Curve document. Please find the lot-specific titer of the Kit Control on the vial or on the Quality Control Certificate. Both the Example Curve document and the Quality Control Certificate are provided with the kit.

Pre-dilute your **specimen** containing AAV6 particles in **ASSB 1x** in serial dilution steps to reach a concentration within the recommended quantification range of the ELISA (*please see section 10*). It might be necessary to perform a pre-experiment to determine the approximate titer of the unknown specimen before analyzing further dilutions.

See page 13 for an example of a plate layout.

### **Example for a plate layout:**

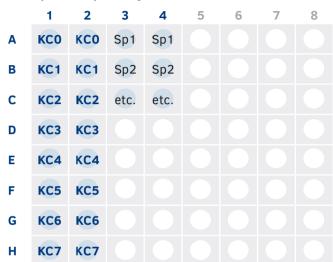

Sp1 = Specimen dilution 1 | Sp2 = Specimen dilution 2

Prepare dilutions:	
KC0	ASSB 1x
KC1	reconstituted Kit Control
KC2	250 μl <b>KC1</b> + 250 μl ASSB 1x
КСЗ	250 µl <b>KC2</b> + 250 µl ASSB 1x

etc.

## 9. Test Procedure

- Pipette 100 µl of ASSB 1x (KCO), Kit Control serial dilutions and specimen (both in ASSB 1x) in duplicates into the corresponding wells of the microtiter strips. Seal strips with adhesive foil and incubate for 1 h at 37°C.
- 2. Discard content of microtiter strips. For washing, fill each well with 200 µl of ASSB 1x, incubate approximately 5 sec, discard and tap inverted plate onto absorbent paper. Carry out three washing steps in total.
- Prepare Biotin 1x. Pipette 100 μl of Biotin 1x into each well. Seal strips with adhesive foil and incubate for 1 h at 37°C.
- 4. Repeat washing step as described in 2.
- Prepare Strep-HRP 1x. Pipette 100 μl of Strep-HRP 1x into each well. Seal strips with adhesive foil and incubate for 1 h at 37°C.
- **6.** Repeat washing step as described in 2.
- 7. Pipette 100 µl of ready-to-use **TMB** into each well. Seal strips with adhesive foil and incubate for **15 min at RT**.

- 8. Stop color reaction by adding 100 μl of STOP into each well
- Make sure no air bubbles are in the wells. Within 30 min, measure color intensity with a photometer at a wavelength of 450 nm (optional: reference wavelength at 650 nm).

## 10. Calculation of Results


If applicable, subtract values measured at 650 nm reference wavelength from values at 450 nm. The test is also valid if you use OD values at 450 nm only.

Calculate the average absorbance values for each duplicate set of Kit Control dilutions and specimen dilutions.

Create a standard curve by plotting the mean absorbance value of each Kit Control dilution (y-axis, linear scale) against the corresponding concentration (x-axis, logarithmic scale recommended).

Use a best fit curve for calculating the results. We suggest using a suitable computer program for the calculation. A 4-parameter logistic fit (4PL) is recommended. Calculate the particle titer of your specimens.

The kit is quantitative over the whole range of Kit Control dilutions. For highest accuracy, the OD values of unknown samples should ideally be in the recommended range for quantification:

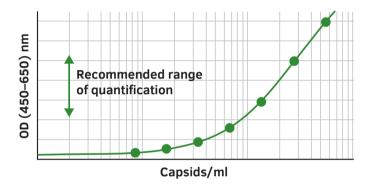

Multiply the value obtained by the dilution factor to determine the amount of capsids/ml in the sample.



### Please note:

The Kit Control curve needs to be determined for each experiment individually. For further guidance take a look at the lot-specific Example Curve provided with the kit.

# 11. Test Validity

The absorbance value of the undiluted Kit Control should be > 1.2.

The absorbance value of the Blank should be < 0.3.

# 12. Test Characteristics

The Kit Control has been calibrated on an internally established reference standard. The internal reference standard is a preparation of full capsids, which has been characterized by qPCR and ddPCR (DNA quantification) and TEM (ratio of full to empty capsids).

# 13. General Information

For professional use.

#### Release notes

The instruction manual is only valid in combination with the lot-specific documents (→ Example Curve and Quality Control Certificate), which are enclosed in each kit.

Please make sure to use the instruction manual with the version number that corresponds to the number on the lot-specific documents.

### **Precautions**

All liquid components except TMB and STOP contain a preservative. Do not swallow. Avoid any contact with skin or mucous epithelia!

STOP (sulphuric acid) and TMB may cause skin or eye irritation. In the event of eye contact, rinse out immediately with plenty of water and consult a physician!

Safety data sheet is available on request.

### **Disposal**

Product: Chemicals and biological materials must be disposed of in compliance with the respective national regulations.

Packaging: Packaging must be disposed of in compliance with the respective national regulations. Handle contaminated packaging in the same way as the product itself. If not officially specified otherwise, non-contaminated packaging may be treated like household waste or may be recycled.

### **Transport damages**

If a kit is considerably damaged, please contact the manufacturer or local distributor. Do not use damaged components for test procedure. Such components or kits should be stored at 2–8°C until the complaint is handled.



### **PROGEN Biotechnik GmbH**

Maaßstraße 30 69123 Heidelberg, Germany

+49 (0) 6221 8278 0 info@progen.com

www.progen.com

Date of release: 18.09.2018

